


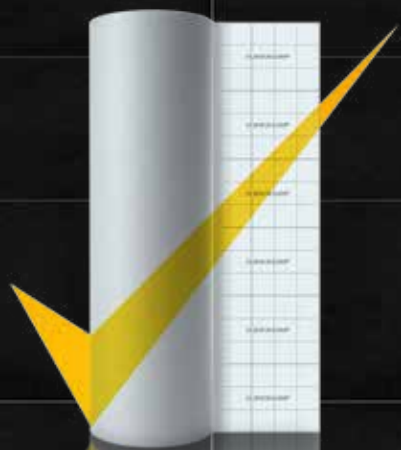

10
year
guarantee

The Dunlop 10 year guarantee applies only when used as part of a system of suitable Dunlop tile adhesive and grout.



Take a closer look

www.dunlop-adhesives.com/procover

For further information on this or any Dunlop product refer to our website www.dunlop-adhesives.com or contact our helpline for advice.

Technical Helpline: 01782 591120

Social Media



@DunlopAdhesives



Dunlop Adhesives



Dunlop UK



Dunlop Trade Zone

Contacts:

Building Adhesives Limited
Longton Road
Trentham
Stoke-on-Trent
ST4 8JB
England

Unit 622
Phase III
North West Business Park
Ballycoolin
Dublin 15

Sales Tel: + 44 (0) 1782 591160 Tel: +353 (0) 1 880 9210
Sales Fax: + 44 (0) 1782 591131 Fax: +353 (0) 1 880 9211


Helpline Tel: + 44 (0) 1782 591120
Helpline Fax: + 44 (0) 1782 591121

www.dunlop-adhesives.com



ProCover Uncoupling Mat

The NEW Dunlop ProCover Uncoupling Mat gives you the confidence to tile onto difficult floors which are at risk from stresses and lateral movement.

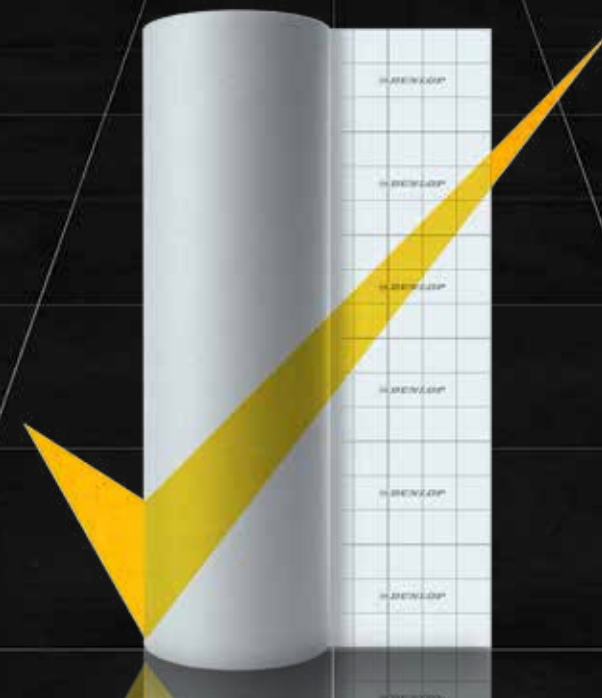

Take a closer look

www.dunlop-adhesives.com/procover

WITHOUT the new Dunlop ProCover Uncoupling Mat



How does it work?

The NEW Dunlop ProCover Uncoupling Mat gives you the confidence to tile onto difficult floors which are at risk from stresses and lateral movement.

What it means for you

- ✓ Ideal for tiling onto timber floors and new sand & cement screeds
- ✓ Perfect for underfloor or undertile heating
- ✓ Prevents cracking or de-bonding of the tiles
- ✓ Simple to install
- ✓ 1mm mat depth does not increase heights
- ✓ Pre-marked gridlines to help cutting
- ✓ Tape not required



when used as part of a system

Easy to use


1

Apply adhesive to the floor



2

Roll on the Dunlop ProCover Uncoupling Mat

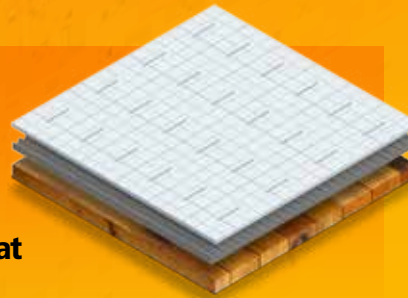


3

Apply the top coat of adhesive



4

Apply the tiles to the top layer of adhesive

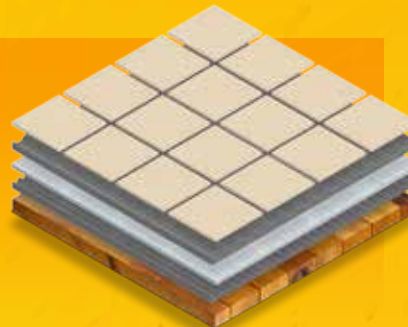

Instructions for use

- Always prepare the background to the requirements of the substrate.
- Ensure the floor is sound, flat and free from loose particles and dust. Roll the mat out on the floor area and cut to the required size using scissors or a utility knife. The printed gridlines will help ensure accurate sizing.
- Move the mat to one side and spread a layer of suitable Dunlop tile adhesive, such as **Dunlop Set Fast Plus Floor & Wall Tile Adhesive**, onto the floor using a 4mm notched trowel.
- Smooth the mat into the wet adhesive, ensure any edges are butted up but do not overlap the edges of the mat. It is important to apply the mat within the working time of the adhesive. Any break or join in the background must be married with a break in the mat.
- The mat must be fully pressed into the tile adhesive, this can be achieved using a trowel or float over the surface to gently push out any air pockets. Remove any tile adhesive which has extruded through the joints.
- Once the mat is in place, you can immediately begin tiling using a suitable tile adhesive such as **Dunlop Set Fast Plus Floor & Wall Tile Adhesive** or **Dunlop Large Format & Natural Stone Floor Tile Adhesive**. Spread the adhesive over the mat using a suitable thick bed solid bed trowel and lay the tiles as normal. The total thickness of adhesive on top of the mat must not exceed 6mm.